

Charging Station Quick Start Guide

## Welcome

Thank you for choosing an Arlo battery charging station. Charging Arlo batteries is easy.

### What's Included



Charging station



Power cable



Window decal



Power adapter (varies by region)

# Charge the Batteries

Plug the power adapter into an electrical outlet.



Note: You must use the Arlo Charging Station adapter and cable or the Arlo Pro camera power adapter and cable when you use the charging station

- 2. Connect the cable to the charging station and plug it in.
- 3. Insert a battery (not included) into a charging station bay.



Align the battery with the grooves inside the charging station bay.

- Press the battery into the charging bay until you hear a click.
  - The LED lights solid amber to indicate that the battery is fully inserted and is charging.
- To charge a second battery, insert another battery into the other charging station bay.
   When the batteries are fully charged, the LED lights solid green.
- To remove a battery from a charging bay, press the battery and release it.
   A click sound indicates that the battery is disengaged and can be removed.

### You're Done!

To view useful tutorial videos, find troubleshooting tips, or get support, visit *support.arlo.com*.

#### Charging Station LED Guide



- Solid green
  A battery is inserted and is fully charged.
  - Fast blinking amber
    A battery is inserted
    and the charge failed.
- Solid amber
   A battery is inserted and is charging.
- Off The charging station is powered off or no batteries are inserted.

©2018 Arlo Technologies, Inc. Arlo, Arlo logo, and Every Angle Covered are trademarks of Arlo Technologies, Inc. Other trademarks are for reference purposes only.

#### Compliance

For regulatory compliance information including the EU Declaration of Conformity, visit www.arlo.com/about/regulatory/.





Arlo Technologies, Inc. 2200 Faraday Ave. Suite 150 Carlsbad, CA 92008 USA www.arlo.com www.arlo.com/support

November 2018



201-20612-04