



arlo™

Charging Station
Quick Start Guide



Welcome

Thank you for choosing an Arlo battery charging station. Charging Arlo batteries is easy.

What's Included



Charging station



Power cable



Window decal



Power adapter
(varies by region)

Charge the Batteries

1. Plug the power adapter into an electrical outlet.



Note: You must use the Arlo Charging Station adapter and cable or the Arlo Pro camera power adapter and cable when you use the charging station.

2. Connect the cable to the charging station and plug it in.
3. Insert a battery (not included) into a charging station bay.



Align the battery with the grooves inside the charging station bay.

4. Press the battery into the charging bay until you hear a click.

The LED lights solid amber to indicate that the battery is fully inserted and is charging.

5. To charge a second battery, insert another battery into the other charging station bay.

When the batteries are fully charged, the LED lights solid green.

6. To remove a battery from a charging bay, press the battery and release it.

A click sound indicates that the battery is disengaged and can be removed.

You're Done!

To view useful tutorial videos, find troubleshooting tips, or get support, visit support.arlo.com.

Charging Station LED Guide



Solid green

A battery is inserted and is fully charged.



Solid amber

A battery is inserted and is charging.



Fast blinking amber

A battery is inserted and the charge failed.



Off

The charging station is powered off or no batteries are inserted.

©NETGEAR, Inc., NETGEAR, the NETGEAR Logo, and Arlo are trademarks of NETGEAR, Inc.

Compliance

For the current EU Declaration of Conformity, visit
http://kb.netgear.com/app/answers/detail/a_id/11621/.

For regulatory compliance information, visit
<http://www.netgear.com/about/regulatory/>.

NETGEAR®

350 East Plumeria Drive
San Jose, CA 95134, USA

March 2017



NETGEAR INTL LTD

Building 3, University Technology Centre
Curraheen Road, Cork, Ireland



201-20612-03